

WARNING

To properly install this light, you must have a good understanding of automotive electrical procedures and systems, along with proficiency in the installation and use of safety warning equipment. Before installing this device, refer to the unabridged instructions (doc. no. 25500119) for this device, which are available online at www.fedsig.com. Print the online document and provide copies to the end users of this product and to the personnel who will service this product.

WIRING:

To +VDC(fuse rating @ 0.5A):**RED**

To Vehicle Chassis Ground:**BLACK**


(For steady-burn models, external flasher may be used for warning purpose.)

INSTALLATION:

(Actual mounting kit is based on the ordered model)


Surface mount

Standard Bezel

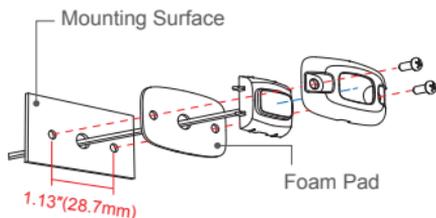

45° Angled Bezel

(For illumination module only)

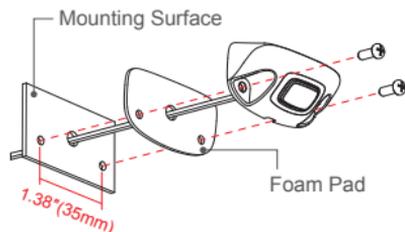

INSTRUCTION:

1. Put the lighthead on to the selected surface and mark the two screws mounting position.
2. Drill a wire access cut-out (suggested diameter @ 0.23" [6.0mm]) on the selected mounting surface between the two screw marks.
3. Install the foam pad to the lighthead.
4. Lead the wires through the cut-out and make all necessary connections.
5. Tighten the two screws and make sure the lighthead is fixed.