



WARNING

To properly install this light, you must have a good understanding of automotive electrical procedures and systems, along with proficiency in the installation and use of safety warning equipment. Before installing this device, refer to the unabridged instructions (doc. no. 25500119) for this device, which are available online at www.fedsig.com. Print the online document and provide copies to the end users of this product and to the personnel who will service this product.

WIRING

To +VDC for Color1 (fuse rating @ 2A): **RED x 2**
(Connect to external flasher for warning purpose.)

To +VDC for Color2 (fuse rating @ 2A): **WHITE**
(Connect to external flasher for warning purpose.)

To Vehicle Chassis Ground: **BLACK**


CAUTION: When using with a 3rd party external flash controller, ensure the duty ratio of the flash pattern is less than 50%.

*Tie the two red wires together at the light.

INSTALLATION:

Surface mount

NOTE: The suggested mounting position is with the LEDs facing downward.

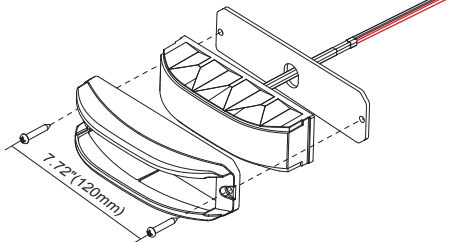

INSTRUCTION:

1. Put the lighthead on to the selected surface and mark the two screws mounting position.
2. Drill a wire access cut-out (suggested diameter @ 0.5") on the selected mounting surface between the two screw marks.
3. Install the foam pad to the lighthead.
4. Lead the wires through the cut-out and make all necessary connections.
5. Tighten the two screws and make sure the lighthead is fixed.