

LIGHTING PRODUCTS



FEDERAL SIGNAL CORPORATION
2645 Federal Signal Dr., University Park, IL 60484-3167
TEL 800.433.9132 FAX 800.343.9706
www.fedsig.com

RECESSED MOUNT

INSTALLATION INSTRUCTIONS

Refer to the General Lighting manual or lamphead specific sheets for safety and maintenance.

Install Recessed Mount


1. Measure and mark mounting location for cutout.
2. Cut out mounting hole.
3. Place the light in position to check for fit and mark mounting screw locations.
4. Double check the clearance around and behind the light housing. Recessed lights require a minimum of 3 inch clearance between wall insulation and the light housing.
5. Drill mounting screw holes.

Note: Wires may need to be connected before installing the recessed light.

6. Ensure that approved strain relief for the wiring is installed.

Note: Take steps to prevent dissimilar metal corrosion between the light housing and the screws. Apply a corrosion preventive coating to the screws and use the supplied plastic inserts.

7. Secure the housing with mounting screws.

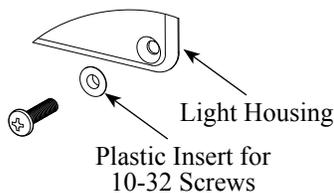

Wiring

12/24 VDC

Connect the BLACK wire to GROUND.

Connect the RED (or WHITE) wire to POWER.





Recessed Mount

Install Recessed Mount

Lamphead	W	D	H	W ₂	H ₂
-V12	13 7/8	2	5 7/8	12 1/2	4 1/2

Note: W₂ and H₂ will be the cutout dimensions in inches.

Recessed Mount

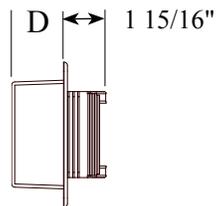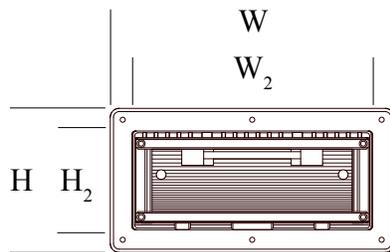

Hardware Recommendations
 For recessed mount:
 10-32 SS