



**FEDERAL SIGNAL**

Safety and Security Systems / **Industrial**

## **110 Series**

**Loudspeaker, Powered Loudspeaker, and Sounder**

**Includes 112 and 114 Versions**

**8 and 15 Watts**

**(Model Type ES1/MS1)**



---

***Installation, Operation,  
and Maintenance***



Warranty – Seller warrants all goods for five years on parts and 2-1/2 years on labor, under the following conditions and exceptions: Seller warrants that all goods of Seller's manufacture will conform to any descriptions thereof for specifications which are expressly made a part of this sales contract and at the time of sale by Seller such goods shall be commercially free from defects in material or workmanship. Seller reserves the right at the Seller's discretion to "Repair and Return" or "Replace" any item deemed defective during the warranty period. This warranty does not cover travel expenses, the cost of specialized equipment for gaining access to the product, or labor charges for removal and reinstallation of the product. This warranty shall be ineffective and shall not apply to goods that have been subjected to misuse, neglect, accident, damage, improper maintenance, or to goods altered or repaired by anyone other than Seller or its authorized representative, or if five years have elapsed from the date of shipment of the goods by Seller with the following exceptions: lamps and strobe tubes are not covered under this warranty. Outdoor warning sirens and controllers manufactured by Federal Warning Systems are warranted for two years on parts and one year on labor. No agent, employee, representative or distributor of Seller has any authority to bind the Seller to any representation, affirmation, or warranty concerning the goods and any such representation, affirmation or warranty shall not be deemed to have become a part of the basics of the sales contract and shall be unenforceable. THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OR MERCHANTABILITY, FITNESS FOR PURPOSE AND OF ANY OTHER TYPE, WHETHER EXPRESS OR IMPLIED. These warranties shall not apply unless Seller shall be given reasonable opportunity to investigate all claims for allegedly defective goods. Upon Seller's instruction a sample only of allegedly defective goods shall be returned to Seller for its inspection and approval. The basis of all claims for alleged defects in the goods not discoverable upon reasonable inspection thereof pursuant to paragraph 8 hereof must be fully explained in writing and received by Seller within thirty days after Buyer learns of the defect or such claim shall be deemed waived.

Federal Signal Corporation  
Integrated Systems  
2645 Federal Signal Drive  
University Park, IL 60484-3167, U.S.A.

## Contents

<b>Safety Message to Installers, Operators, and Maintenance Personnel .....</b>	<b>5</b>
<b>An Overview of the 110 Series .....</b>	<b>6</b>
Product Detail .....	7
Special Conditions for Safe Use.....	10
Condições especiais para o Uso Seguro: .....	10
Accessing the Terminals and Glands .....	10
Earthing .....	11
Greasing the Holes for the Mounting Face and Screws .....	12
<b>Wiring the Powered Loudspeaker.....</b>	<b>14</b>
For 240 Vac Operation .....	14
For 110 Vac Operation.....	14
For 24 Vdc Operation .....	14
<b>Wiring the ES1/MS1 Multi-Tone Sounder .....</b>	<b>16</b>
For 240 Vac Operation .....	16
For 110 Vac Operation.....	16
For 24 Vdc 2-Wire Operation.....	16
For 24 Vdc 3-to-5-Wire Operation .....	17
For AC 4-to-6-Wire Operation.....	18
240 Vac Operation: .....	18
110 Vac Operation: .....	18
<b>Routine Maintenance .....</b>	<b>20</b>
<b>Technical Service and Support .....</b>	<b>20</b>
<b>Ordering Replacement Parts .....</b>	<b>21</b>

## **Figures**

<b>Figure 1</b>	Loudspeaker dimensions.....	9
<b>Figure 2</b>	Dimensions of mounting bracket.....	11
<b>Figure 3</b>	Side and rear views of 15 W loudspeaker.....	11
<b>Figure 4</b>	Tapping.....	12
<b>Figure 6</b>	Voltage selector for powered loudspeaker.....	15
<b>Figure 7</b>	Terminals for powered loudspeaker.....	15
<b>Figure 8</b>	Voltage selector for multi-tone sounder.....	19
<b>Figure 9</b>	Terminals for multi-tone sounder.....	19

## **Tables**

<b>Table 1</b>	Tone chart for 240 V, 110 V, and 24 Vdc two-wire operation ...	17
<b>Table 2</b>	Tone chart for 24 Vdc 3-to-5 wire and AC 4-to-6 wire operation.....	19
<b>Table 3</b>	Replacement parts .....	21

## **Safety Message to Installers, Operators, and Maintenance Personnel**

It is important to follow all instructions shipped with this product. This device is to be installed by a trained electrician who is thoroughly familiar with local codes.

The selection of the mounting location for the device, its controls and the routing of the wiring is to be accomplished under the direction of the facilities engineer and the safety engineer. In addition, listed below are some other important safety instructions and precautions you should follow:

- Read and understand all instructions before installing or operating this equipment.
- Do not connect this unit to the system while the power is on.
- All effective warning speakers produce loud sounds, which may cause in certain situations, permanent hearing loss. You should take appropriate precautions such as wearing hearing protection.
- All effective warning speakers produce loud sounds, which may cause, in certain situations, permanent hearing loss. The device should be installed far enough away from potential listeners to limit their exposure while still maintaining its effectiveness.
- After installation, test the sound system to ensure that it operates properly.
- After testing is complete, provide a copy of these instructions to all operating personnel.
- Establish a procedure to routinely check the speaker installation for integrity and proper operation. Any maintenance must be performed by a trained electrician in accordance with NEC guidelines and local codes.

Failure to follow all safety precautions and instructions may result in property damage, serious injury, or death to you or others.

## **An Overview of the 110 Series**

The Federal Signal 110 Series Loudspeaker complies with the ATEX Directive for operation in gaseous hazardous areas classified as Zone 1 with a temperature classification of  $-20\text{ }^{\circ}\text{C}$  to  $+70\text{ }^{\circ}\text{C}$  T4,  $-20\text{ }^{\circ}\text{C}$  to  $+55\text{ }^{\circ}\text{C}$  T5, and  $-20\text{ }^{\circ}\text{C}$  to  $+40\text{ }^{\circ}\text{C}$  T6.

The loudspeakers are designed for use in industrial public address and general alarm applications where ATEX certification is required. They are available in either an ATEX Zone 1 flameproof version or a CE compliant, marine-grade industrial version.

The Model 110 Series Loudspeaker, including the marine versions (loudspeaker and MS1), has a main enclosure with dual gland entries and an FLP end cap. The model is fitted with a nose cone, outer and inner horn, driver, and an adjustable mounting bracket. The components within the main enclosure—transformer, transformer and PCB Assembly, PCB—vary depending on the model.

The loudspeakers are available in 8-watt and 15-watt configurations to provide an appropriate amount of sound for the ambient environment. Each speaker is transformer-coupled to fine tune the sound output for each application and balance the audio load. Available audio inputs are 100 Vrms, 70 Vrms, and 8 ohms.

A stainless-steel ratcheted mounting bracket locks the sounder in position at a specific angle without slipping. The bottom surface of the mounting bracket also contains three mounting holes, to adapt to a variety of surfaces.

The loudspeaker is rated for IP66/67 through the use of a neoprene O-ring seal. All exterior cast aluminum surfaces are finished in powder coat paint and external hardware is manufactured from stainless steel to resist corrosion.

## Product Detail

### Frequency Range:

8-Watt Flameproof 600–4000 Hz	8-Watt Marine 500–8000 Hz
15-Watt Flameproof 390–4500 Hz	15-Watt Marine 390–8500 Hz

### Ambient Temperature Range:

T4 Flameproof and Marine –20 °C to +70 °C	T5 Flameproof –20 °C to +55 °C	T6 Flameproof –20 °C to +40 °C
---	-----------------------------------	-----------------------------------

### Flameproof Rated:

Sound Pressure Level at 1 kHz (full power at 1 meter)

8 W-IIB: 110 dBa	8 W-IIC: 106 dBa	15 W-IIB: 116 dBa	15 W-IIC: 112 dBa
---------------------	---------------------	----------------------	----------------------

Sound Pressure Level at 1 kHz (1 watt at 1 meter)

8W-IIB: 110 dBa	8W-IIC: 106 dBa	15W-IIB: 116 dBa	15W-IIC: 112 dBa
--------------------	--------------------	---------------------	---------------------

### Marine Rated Power:

Sound Pressure Level at 1 kHz (full power at 1 meter)

8 W: 114 dBa	15 W: 118 dBa
-----------------	------------------

Sound Pressure Level at 1 kHz (1 watt at 1 meter)

8 W: 104 dBa	15 W: 106 dBa
-----------------	------------------

### Certifications and Approvals:

8 and 15 W:

Baseefa 03ATEX0688X  II2G ExdIIIBT4 (T6)

Baseefa 03ATEX0689X  II2G ExdIIICT4 (T6)

Marine:

Electromagnetic compatibility to EN 61000-6-1, 2, 3, 4: 2001

## Standards:

EN60079-0

EN60079-1

## CE:

EMC to EN 61000-6-1,2,3,4

LVD to EN 60065

## Ingress Protection:

Flameproof IP66

Marine IP66

## Specifications:

## Net Weight

8 W Short Horn Series 3.0 kg (6.6 lb)

15 W Standard Horn Series 3.2 kg (7.1 lb)

Shipping Dimensions 29 cm x 29 cm x 30 cm  
(11.42 in x 11.42 in x 11.81 in)

## Dispersion Angle

8 W Short Horn Series 180°

15 W Standard Horn Series 120°


Type	Dual entry
Gland Entries	2 x M20 x 1.5 mm
Cable Terminations	6A, 1.5 mm conductors
Mounting	Unpainted stainless steel bracket
Body and Horn Material	Marine grade aluminum alloy
Audio Input	100 volt, 70 volt, and 8 ohm

**▲ WARNING****FIRE/EXPLOSION HAZARD**

**Do not use the 110 Series in flammable atmospheres containing carbon disulphide (CS<sub>2</sub>). All units are not certified for use in flammable atmospheres containing carbon disulphide.**

**Failure to observe this warning could result in serious injury or death.**

Figure 1 Loudspeaker dimensions

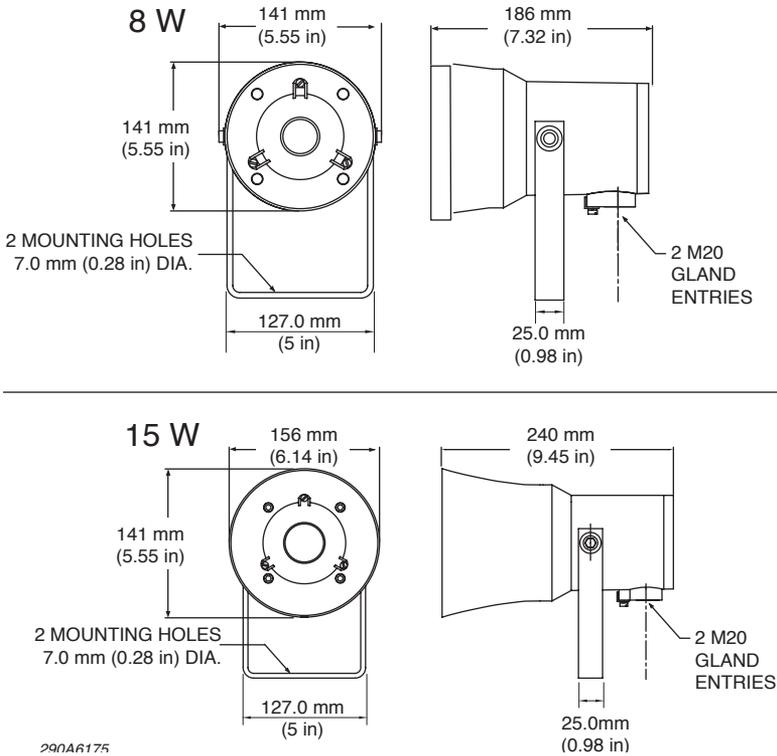

**⚠ AVISO DE PERIGO**

**PERIGO DE FOGO/EXPLOÇÃO**

Não use a série 120 em ambientes inflamáveis que contêm dissulfeto de carbono (CS<sub>2</sub>). As unidades não estão autorizadas para a utilização em ambientes inflamáveis que contêm dissulfeto de carbono. A não observação deste aviso pode resultar em graves lesões ou morte.

**⚠ WARNING**

**SHOCK HAZARD**

Do not connect this unit to the system while the power is on.

### ***Special Conditions for Safe Use***

To maintain the loudspeaker certification, do not attempt to repair the flameproof enclosure. Units requiring repair to the flameproof enclosure must be returned to Federal Signal for service.

The maximum flame path gap for the IIB variants is the same as for gas group IIC.

All terminal screws, used or unused, must be tightened 0.5 N • m to 0.7 N • m.

#### ***Condições especiais para o Uso Seguro:***

Para manter a certificação do auto-falante, não tente restaurar a cobertura à prova de fogo. As unidades cujas coberturas à prova de fogo necessitem ser restauradas deverão ser enviadas à empresa “Federal Signal” para seu devido conserto.

O intervalo máximo do trajeto da chama para as variantes de gases IIB é o mesmo que para o grupo de gases IIC.

Todos os parafusos das terminais, estejam as mesmas em uso ou não, deverão ser apertados à pressão de 0,5 N • m a 0,7 N • m.

This product must be installed and maintained only by qualified personnel who have received the relevant training. During installation ensure that all external screw threads and flameproof faces are suitably greased. Recommended torque on all external fixings is 5 N • m. Check details on the label to ensure the unit is of the correct electrical rating and hazardous area classification.

Ensure the unit is securely mounted using the supplied bracket. Use M12 for the center hole and/or 2 x M6 in the outer holes (Figure 2). You can adjust the angle of the loudspeaker by using the external ratcheted brackets on each side of the body (Figure 3).


### ***Accessing the Terminals and Glands***

To access the cable terminals:


1. Remove the end cap (Figure 3) by first removing the four M5 socket-head cap screws.
2. The purpose of the jack screws, if equipped, is to aid in the removal of the end cap. Tighten the two M4 jack screws crosswise until the cover can be lifted off.

The M20 gland entries are located in the main enclosure. Ensure the cable is terminated in accordance with the gland manufacturer's instructions using approved cable glands. Note that the center-line distance between the gland entries is 32.0 mm. When using larger diameter cable glands, use suitably rated elbows or nipples to offset glands to avoid interference. Any unused entry must be sealed with a suitably certified stopper plug. Loudspeakers in close proximity must be connected in the same phase.

**Figure 2** Dimensions of mounting bracket

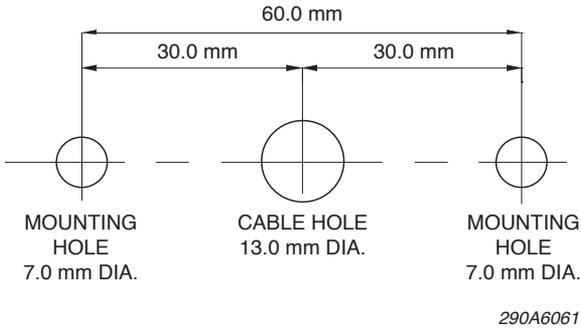

**Figure 3** Side and rear views of 15 W loudspeaker

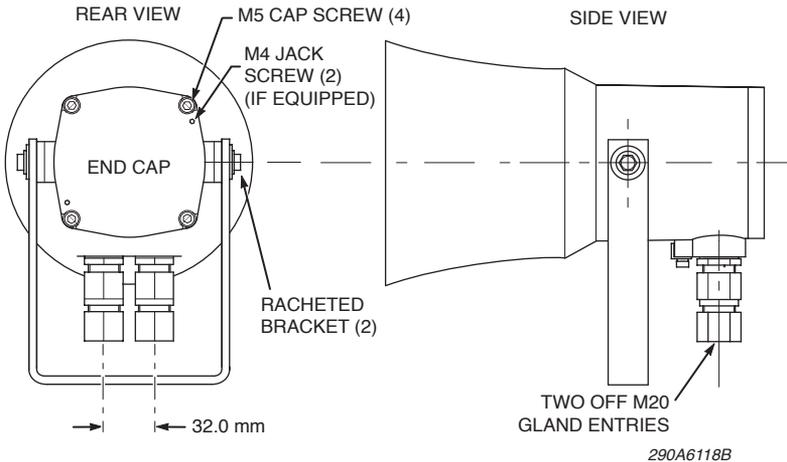


## Earthing

The unit must be correctly connected to earth. Both internal and external earth terminals are provided.

### Greasing the Holes for the Mounting Face and Screws

Before the installation you must grease all holes for the O-ring mounting face and screws. On the end caps with jack screws, be sure that the jack screws do not protrude past the inner face of the end cap so that the cover can seat completely. When you are finished with the installation, reinstall the O-ring and end cap, ensuring that there are no trapped wires. Tighten the end cap using all four stainless-steel screws to 5 to 7 N · m.

**Figure 4** Tapping

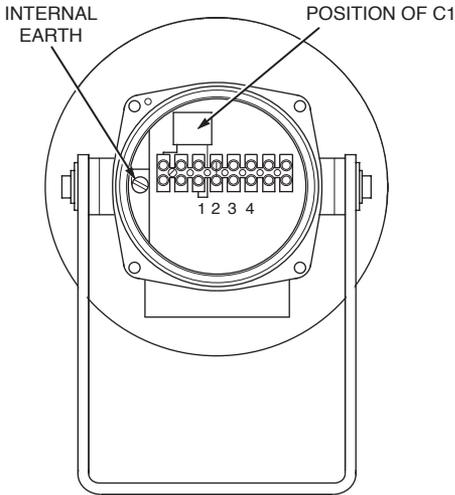


TRANSFORMER TAPPINGS		
TERMINALS	STD	LOW
	INTERNAL 5	BLACK ON 6
1 AND 2	15.0 W	1.0 W
1 AND 3	10.0 W	0.7 W
3 AND 4	7.0 W	0.5 W
2 AND 4	5.0 W	0.3 W
1 AND 4	2.0 W	0.1 W



TRANSFORMER TAPPINGS		
TERMINALS	STD	LOW
	INTERNAL 5	BLACK ON 6
1 AND 2	8.0 W	0.5 W
1 AND 3	5.0 W	0.3 W
3 AND 4	3.0 W	0.2 W
2 AND 4	2.0 W	0.1 W
1 AND 4	1.0 W	0.05 W

TRANSFORMER TAPPINGS		
TERMINALS	STD	LOW
	INTERNAL 5	BLACK ON 6
1 AND 2	2.0 W	0.10 W
1 AND 3	1.0 W	0.07 W
3 AND 4	0.7 W	0.05 W
2 AND 4	0.5 W	0.03 W
1 AND 4	0.2 W	0.01 W

**Figure 5** Wiring diagram and double-gland tapping

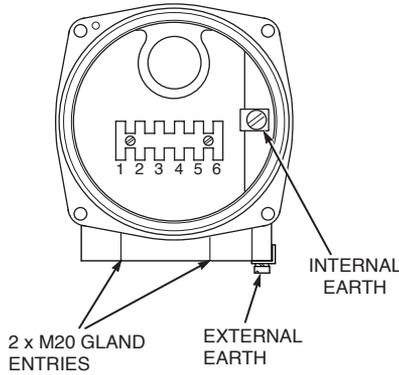

**WIRING DIAGRAM**

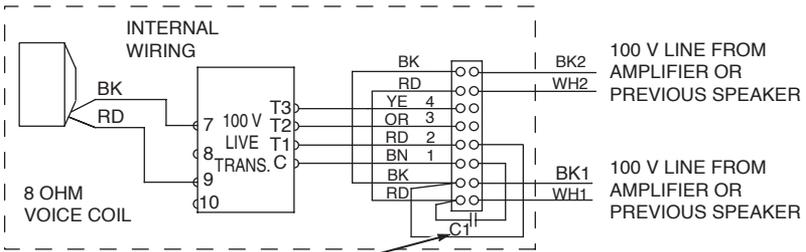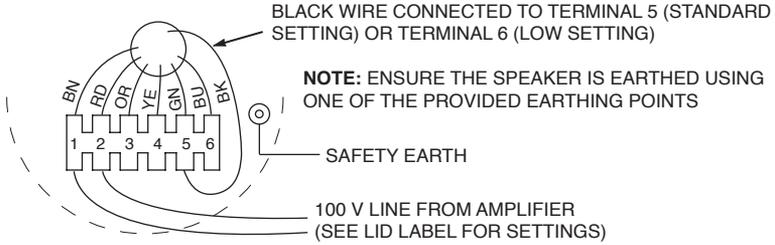

290A6062

**NOTE:** IF A DC BLOCKING CAPACITOR IS TO BE USED:  
 C1 FARNELL 1166126 (C2.2  $\mu$ F 250 V POLYESTER) (SEE FIGURE 3)  
 INSULATE LEGS ON ASSEMBLY & ENSURE THAT THERE IS ENOUGH TAIL TO ACCOMMODATE DIFFERENT TAPPINGS

290A6063B

## **Wiring the Powered Loudspeaker**

This section provides instructions for operating the powered loudspeaker at 240 Vac, 110 Vac, and 24 Vdc. It also includes the signal input. See Figures 6 and Figure 7 on page 15.

### ***For 240 Vac Operation***

1. Set the Voltage Selector to 230 V.
2. Insert the 250 mA fuse.
3. Connect the Live wire to the LIVE In terminal.
4. Connect the Neutral wire to the NEUTRAL IN terminal.
5. Connect the Internal Earth wire to the INTERNAL EARTH terminal.
6. Connect the Signal Output wire to the SIG GND IN and SIG IN terminals.

### ***For 110 Vac Operation***

1. Set the Voltage Selector switch to the 110 Vac position.
2. Insert the 500 mA fuse.
3. Connect the Live wire to the LIVE IN terminal.
4. Connect the Neutral wire to the NEUTRAL IN terminal.
5. Connect the Internal Earth wire to the INTERNAL EARTH terminal.
6. Connect the Signal Output wire to the SIG GND IN and SIG IN terminals.

### ***For 24 Vdc Operation***


1. Connect to the 0V common terminal.
2. Connect +24 Vdc wire to the +24V IN terminal.
3. Connect the Internal Earth wire to the INTERNAL EARTH terminal.
4. Connect the Signal Output wire to the SIG GND IN and SIG IN terminals.

NOTE: Input sensitivity of 2.8 Vrms should be used with the Federal Signal ECHO Intercom System.


### Settings for the Signal Input Gain

- No jumper is fitted to 8 Vrms IP for 0 dB.
- Fit jumper to L1 2.8 Vrms for 0 dB.
- Fit jumper to L2 1.5 Vrms for 0 dB.
- Fit jumper to L3 0.8 Vrms for 0 dB.

**Figure 6** Voltage selector for powered loudspeaker

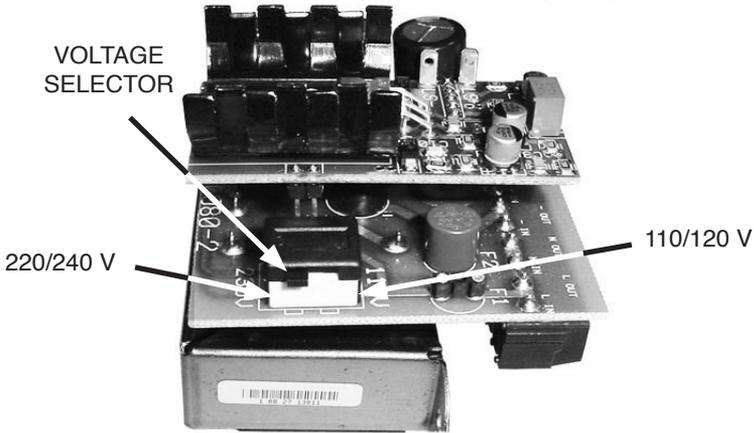

**Figure 7** Terminals for powered loudspeaker

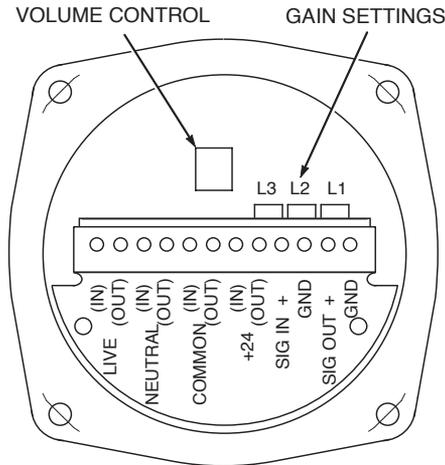

## **Wiring the ES1/MS1 Multi-Tone Sounder**

This section provides instructions for operating the Multi-Tone Sounder at 240 Vac, 110 Vac, and 24 Vdc. See Table 1 on page 17.

Also included are instructions for 24 Vdc 2-wire operation, 24 Vdc 3-to-5-wire operation, and AC 4-to-6-wire operation. See Figures 8 and 9 on page 19.

### ***For 240 Vac Operation***

1. Set the Voltage Selector to 230 V.
2. Insert the 250 mA fuse.
3. Turn the tone selector to the position of the tone you want.
4. Connect the Live wire to the LIVE IN terminal.
5. Connect the Neutral wire to the NEUTRAL IN terminal.
6. Connect the Internal Earth wire to the INTERNAL EARTH terminal.

### ***For 110 Vac Operation***

1. Set the Voltage Selector to 110 Vac.
2. Insert the 500 mA fuse.
3. Turn the tone selector to the position of the tone you want.
4. Connect the Live wire to the LIVE IN terminal.
5. Connect the Neutral wire to the NEUTRAL IN terminal.
6. Connect the Internal Earth wire to the INTERNAL EARTH terminal.

### ***For 24 Vdc 2-Wire Operation***

1. Turn the tone selector to the position of the tone you want.
2. Connect to the 0V common terminal.
3. Connect the +24 Vdc wire to the +24V IN terminal.
4. Connect the Internal Earth wire to the INTERNAL EARTH terminal.

**Table 1** Tone chart for 240 V, 110 V, and 24 Vdc two-wire operation

Position	Tone
0	OFF
1	Two tones: 588 Hz for 0.25 second, 714 Hz for 0.25 second
2	Swept 600 Hz > 700 Hz in 0.5 second
3	Telephone warble
4	Constant 700 Hz
5	Simulated bell, three rings per second
6	Swept 1.2 kHz > 1.6 kHz, swept 1.6 kHz > 1.2 Hz, six cycles per second
7	Two tones: 1 kHz for 0.4 second, 700 Hz for 0.4 sec.
8	700 Hz for 0.25 second, silence for 0.25 second
9	Swept 400 Hz > 1.6 Hz in 1 second, constant 1.2 Hz for 2 second
A (10)	Swept 500 Hz 770 Hz in 0.5 second.
B (11)	1 kHz for 1 second, silence for 1 second
C (12)	Constant 1 kHz
D (13)	Two tones: 700 Hz for 0.5 second, 500 Hz for 0.5 second
E (14)	Warble between 1 kHz and 1.4 kHz approx. 10 cycles per second
F (15)	Swept 1.2 kHz > 400 Hz in 1 second

### ***For 24 Vdc 3-to-5-Wire Operation***

See the tone chart and illustrations on page 19.

1. Turn the tone selector to 0.
2. Connect to the 0 V common terminal.
3. Connect the +24 Vdc supply/select wires to the T1, T2, T3, T4 terminals. These connections enable you to select the four basic tones remotely.
4. Connect the Internal Earth wire to the INTERNAL EARTH terminal.

### ***For AC 4-to-6-Wire Operation***

See the tone chart and illustrations on page 19.

#### **240 Vac Operation:**

1. Set the Voltage Selector to 230 V.
2. Insert the 250 mA fuse,
3. Turn the Tone Selector to the 0 position.
4. Connect the Live wire to the LIVE IN terminal.
5. Connect the Neutral wire to the NEUTRAL IN terminal.
6. Connect the Internal Earth wire to the INTERNAL EARTH terminal.
7. Connect a link between the NEUTRAL OUT and +24V OUT terminals.
8. In the control panel connect from Neutral return through SELECT LINES. These connections enable you to remotely select the four basic tones.
9. Connect wires to the T1, T2, T3, and T4 terminals as needed.

#### **110 Vac Operation:**


1. Set the Voltage Selector to 110 V.
2. Insert the 500 mA fuse,
3. Turn the Tone Selector to the 0 position.
4. Connect the Live wire to the LIVE IN terminal.
5. Connect the Neutral wire to the NEUTRAL IN terminal.
6. Connect the Internal Earth wire to the INTERNAL EARTH terminal.
7. Connect a link between the NEUTRAL OUT and +24V OUT terminals.
8. In the control panel connect from Neutral return through SELECT LINES. These connections enable you to remotely select the four basic tones.
9. Connect wires to the T1, T2, T3, and T4 terminals as needed.

**Table 2**


Tone chart for 24 Vdc 3-to-5 wire and AC 4-to-6 wire operation

Terminal	Tone
T1	Two tones: 588 Hz for 0.25 second, 714 Hz for 0.25 second
T2	Swept 600 Hz > 700 Hz in 0.5 second
T3	Constant 700 Hz
T4	700 Hz for 0.25 second, silence for 0.25 second

**Figure 8** Voltage selector for multi-tone sounder

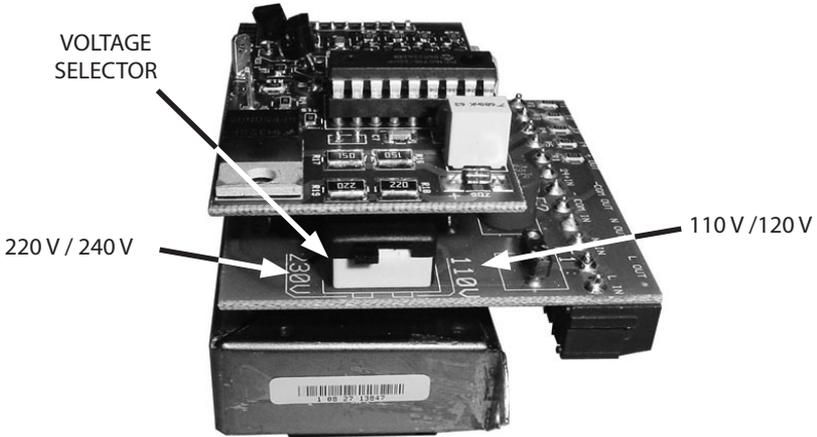

**Figure 9** Terminals for multi-tone sounder

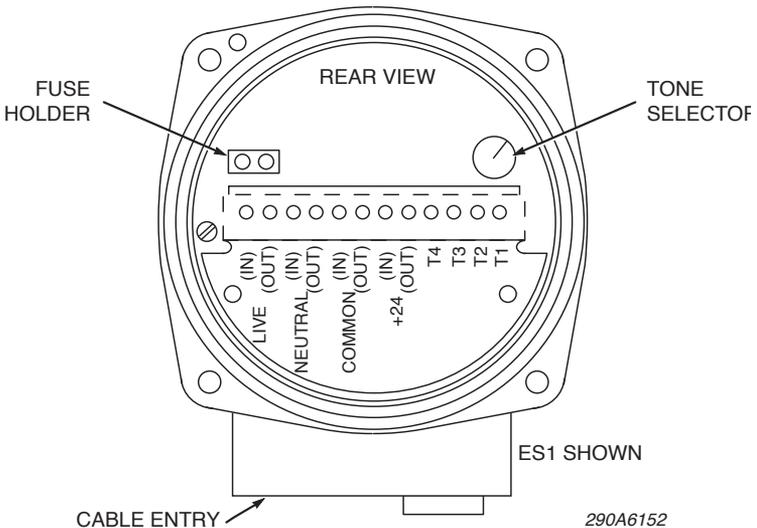

## Routine Maintenance

**⚠ WARNING**

**FIRE/EXPLOSION HAZARD**

**Do not open the loudspeaker and/or sounder, even they are isolated, when a flammable-gas atmosphere is present.**

**Failure to observe this warning could result in serious injury or death.**

**⚠ AVISO DE PERIGO**

**PERIGO DE FOGO/EXPLOÇÃO**

**Não abra a cobertura na presença de gases perigosos. A não observação deste aviso pode resultar em graves lesões ou morte.**

Ensure that the unit is maintained in line with the regulations in force and at least once per year.

- Check for external damage and corrosion and repair and replace as required.
- Check for water ingress and replace the O-rings if necessary.
- Check all earth connections.
- Check flameproof paths and fixing screws for damage and corrosion.
- Grease all threads, O-rings, and flameproof paths.

## Technical Service and Support

For technical service and support, please contact:

Federal Signal Corporation  
Integrated Systems  
Service Department  
2645 Federal Signal Drive  
University Park, IL 60484-3167, U.S.A.  
Phone: +1 877 289 3246  
Fax: +1 708 534 4887  
E-Mail: [systems@fedsig.com](mailto:systems@fedsig.com)

## Ordering Replacement Parts

To order the replacement parts listed in Table 3, please contact the Service Department.

**Table 3** Replacement parts

Description	Part Number
Mounting Bracket	K8597134
Ratchet Fixing Kit	K8597198
Cap Screw	K7002086-16
Jack Screw	K7008048-10
O-Ring Kit	K8597201
PCB, 100 V ISMT Module, 8 W	K2001971
PCB, 100 V ISMT Module, 15 W	K2001973
PCB, Sounder Module, 8 W & 15 W	K2005360
PCB, Powered Speaker, 8 W & 15 W	K2005366
Transformer, 100 V	K1461680
Transformer, 70 V	K1461734
Driver Assembly, 8 W & 15 W	K8597165



EC Declaration of Conformity  
Issued: December 1, 2009

We (manufacturer): Federal Signal Corporation  
Signal Division  
2645 Federal Signal Drive  
University Park, IL 60466-3195 U.S.A

declare under our sole responsibility that the following

Model: 110 Series Loudspeakers and Sounders  
Type of Equipment: Flameproof Loudspeakers and Sounders

To which this declaration is in conformity with the following standard(s)

ATEX

EN50014:1997+A1+A2 Electrical apparatus for potentially explosive atmospheres – General  
EN50018:2000+A1 Electrical apparatus for potentially explosive atmospheres – Flameproof 'd'  
EN50019:2000 Electrical apparatus for potentially explosive atmospheres – Increased safety 'c'

LVD

EN60065:2002 Audio, Video, and Similar Electronic Apparatus Safety Requirements

EMC

EN61000-6-1:2001 Generic Immunity for Residential, Commercial, and Light Industrial.  
EN61000-6-2:2001 Generic Immunity Standard for Industrial Environments  
EN61000-6-3:2001 Generic Emissions for Residential, Commercial, and Light Industrial  
EN61000-6-4:2001 Generic Emissions Standard for Industrial Environments

and therefore conforms with EC Directive requirements  
of

94/9/EC relating to equipment and protective systems intended for use in explosive atmospheres (ATEX)  
and,  
73/23/EEC (as amended) relating to electrical safety (LVD)  
and,  
89/336/EEC (as amended) relating to the electromagnetic compatibility (EMC)

Certified by: Baseefa Ltd, Buxton, Derbyshire, SK17 9BJ, UK  
Certificate Number 03ATEX0688X, 03ATEX0689X

Technical File maintained at: Federal Signal Corporation  
Signal Division  
2645 Federal Signal Drive  
University Park, IL 60466-3195 U.S.A

I, the undersigned, herby declare that the products(s) specified above conform to the listed directive(s) and standard(s).

Paul Weber  
*Paul Weber*  
Engineering Section Manager  
Industrial Systems Group

Date: 12/01/2009  
(month/date/year)





Federal Signal Corporation  
Integrated Systems  
2645 Federal Signal Drive  
University Park, IL 60484-3167, U.S.A.

© 2015 Federal Signal Corporation