

Global Series Model G-SPK

Loudspeaker for Use in Hazardous Conditions

25500189 Rev B7 0523



Limited Warranty: This product's limited warranty can be found at www.fedsig.com/SSG-Warranty

SAFETY MESSAGES TO INSTALLERS AND USERS ⚠️: It is important to follow all instructions shipped with this product. This amplified speaker is to be installed by a trained electrician who is thoroughly familiar with and will follow all applicable national and local codes in the country of use.

This loudspeaker should be considered a part of the warning system and not the entire warning system.

The selection of the mounting location for the loudspeaker, its controls, and the routing of the wiring are to be accomplished under the direction of the facilities engineer and the safety engineer. Listed below are some other important safety instructions and precautions you should follow:

- Read and understand all instructions before installing or operating this equipment.
- To avoid electrical shock hazards, do not connect wires when power is applied. Failure to observe this warning may lead to serious injury or death.
- Never alter the unit in any manner. Safety in hazardous locations may be endangered if additional openings or other alterations are made in units specifically designed for use in these locations.
- Do not connect this loudspeaker to the system when power is on.
- All effective warning speakers produce loud sounds, which may cause, in certain situations, permanent hearing loss. Take appropriate precautions such as hearing protection. The device should be installed far enough away from potential listeners to limit their exposure while still maintaining its effectiveness.
- After installation, ensure that all threaded joints are properly tightened.
- After installation, test the loudspeaker system to ensure that it is operating properly
- Keep the unit tightly closed when in operation.
- After testing is complete, provide a copy of this instruction sheet to all personnel.
- Brass inserts have the potential to store a charge when they are not plugged. Consideration should be taken to prevent these from becoming a sparking hazard.
- Establish a procedure to routinely check the loud speaker system for proper activation and operation.
- This equipment is suitable for use in Class I, Division 2, Groups A, B, C, D; Class II, Division 2, Groups F and G; Class III or non-hazardous locations only.
- **WARNING - EXPLOSION HAZARD:** Do not disconnect while the circuit is live or unless the area is known to be free of ignitable concentrations.
- **WARNING - EXPLOSION HAZARD:** Do not remove or replace the fuse when energized.
- The purchaser should make the manufacturer aware of any external effects or aggressive substances to which the equipment may be exposed.

Failure to follow all safety precautions and instructions may result in property damage, serious injury, or death to you or others.

With respect to the potential electrostatic charging hazard as mentioned in the certificate "Specific Conditions of Use," under normal conditions of use, these devices are for fixed installations and not generally in contact with people. The risk of ignition is low. In addition, maintenance, cleaning, and extreme environmental factors (e.g., high velocity dust-laden atmospheres or high-pressure steam) should be taken into account by the end user using local Explosive Atmosphere (Ex) Electrical installation design, selection, inspection, and maintenance Codes and Standards. Cleaning of the devices should be done only with a damp cloth.

Certification

- Certificate Nos:
- ATEX Cert No.: Baseefa15ATEX0155X
 - IECEx Cert No.: IECEx BAS 15.0104X
 - UKEX Cert No.: SGS23UKEX0086X
 - ATEX coding:  II 2 G D
- Protection:
- Ex db IIB T5 Gb or Ex db e IIB T5 Gb
 - Ex tb IIIC T100°C Db IP66 (Tamb= -55°C to + 49°C)
 - Ex db IIC T4 Gb or Ex db e IIC T4 Gb
 - Ex tb IIIC T135°C Db IP66 (Tamb= -55°C to + 70°C)
- Standards:
- EN60079-0:2018
 - EN60079-1:2014
 - EN IEC 60079-7:2015+A1:2018
 - EN60079-31:2014
 - IEC60079-0:2017 7th Ed
 - IEC60079-1:2014-06 7th Ed
 - IEC60079-7:2017 5.1 Ed
 - IEC60079-31:2013 2nd Ed.

Specific Conditions of Use

1. The Modular Audible Device enclosure incorporates a sinter and the volume is greater than 100 cm³; therefore, use of the Modular Audible Device in carbon disulphide gas atmospheres is not permitted.
2. The Modular Audible Device has external non-metallic surfaces that may provide an electrostatic charging hazard. See the manufacturer's instructions for further information.
3. The Modular Audible Device has metallic components in the non-metallic walls of the enclosure, which can store electrical charge and therefore may provide a potential electrostatic discharge. The metallic brass inserts have a capacitance of 24 pF. See the manufacturer's instructions for further information.

cULus Zone Certifications

This equipment is for use in Class I, Zone 1, and Zone 21 hazardous (classified) locations. It has been investigated with reference to risks to life and property and for conformity to the installation and use in provisions of Articles 505 and 506 of NFPA 70 (NEC).

These models use protections:

- Class I, Zone 1, AEx db IIC T4 Gb or AEx db eb IIC T4 Gb
- Zone 21, AEx tb IIIC T135°C Db IP66 (Tamb= -55°C to +70°C)
- Ex db IIC T4 Gb or Ex db eb IIC T4 Gb
- Ex tb IIIC T135°C Db IP66 (Tamb= -55°C to +70°C)

Unpacking the Device: After unpacking the device, examine it for damage and verify parts. If a part is missing or damaged, do not attempt to install, and contact Federal Signal Customer Support.


Creating Combination Fixtures in the Field

The Federal Signal Global Series Ex de products can be connected together in the field using interchangeable E-box end caps and a proprietary coupling system.

The proprietary coupling system allows for simple and cost-effective wiring from product to product, often eliminating the need for expensive Ex wiring practices and Ex rated glands. The E-box is available only when factory installed on an Ex d unit or when used as an E-box spacer adjoining an existing E-box. Please refer to the accessories listed on page 11 for available options. When creating certain fixture combinations, it is necessary to replace E-box end caps before mounting the product. If you are creating combination fixtures, refer to instruction manual 25500259 for specific instructions and details.

A note about combination fixtures: If the product is Ex db marked only, it is for use in gas atmospheres. If the product is Ex db e marked, it uses the increased-safety terminal enclosures and is only for gas atmospheres. If the product is Ex tb marked, it is for installation in dust atmospheres.

Figure 1 Beacon and loudspeaker combination fixture

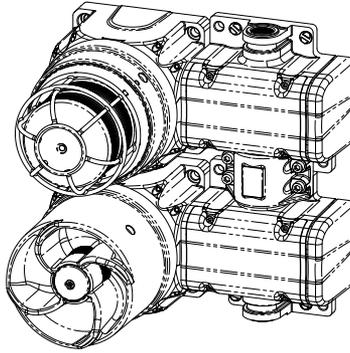

Mounting the Loudspeaker

⚠ WARNING


ATTACH THE LOUDSPEAKER SECURELY: To prevent injury, this apparatus must be securely attached to the mounting surface in accordance with the installation instructions. Use installer-supplied fasteners suitable for the mounting surface.

The mounting method and the installer-supplied mounting hardware depend on which of the two G-SPK models you are installing.

Mounting the Surface-Mount Ex d Loudspeaker

Mount the loudspeaker to a flat surface using the four 8.5 mm mounting holes. Use installer-supplied fasteners suitable for the surface to which the device will be mounted.

Figure 2 Front view of Ex d loudspeaker

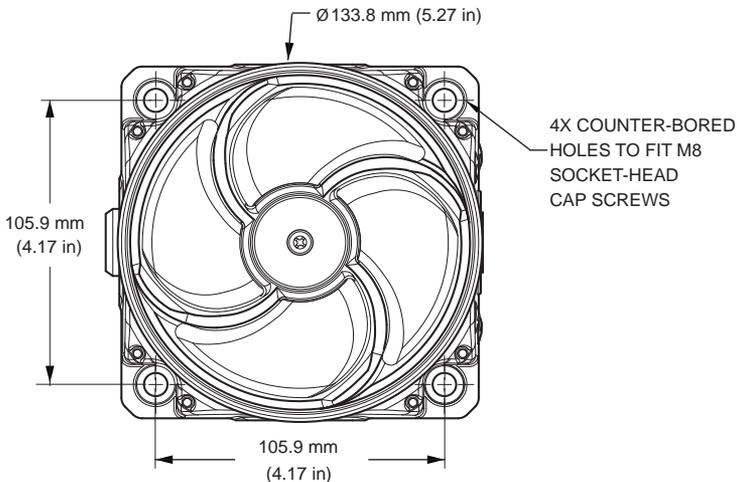

Mounting the Ex de Surface-Mount Loudspeaker

Mount the loudspeaker to a flat surface using the six 8.5 mm mounting holes. Use installer-supplied fasteners suitable for the surface to which the device will be mounted.

Figure 3 Front view of Ex de surface mount


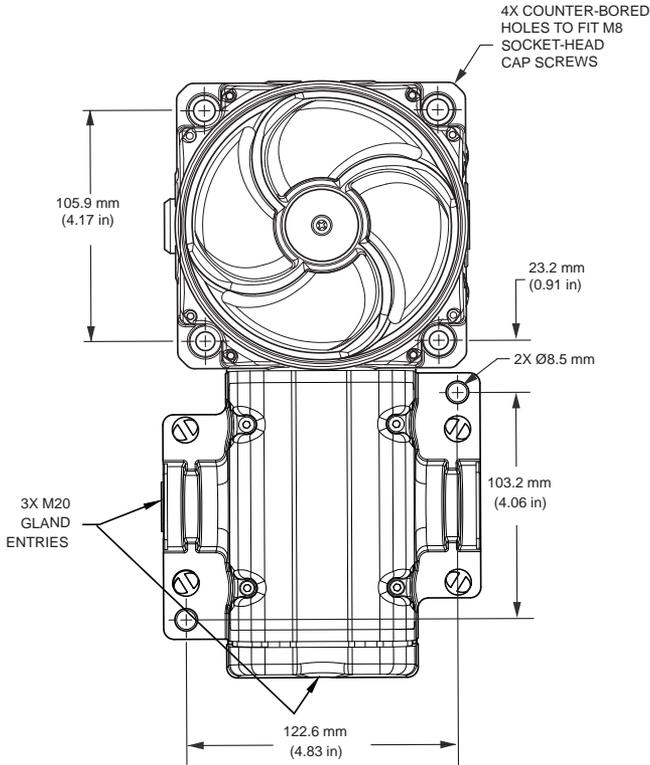


Figure 4 Side view of Ex de surface mount

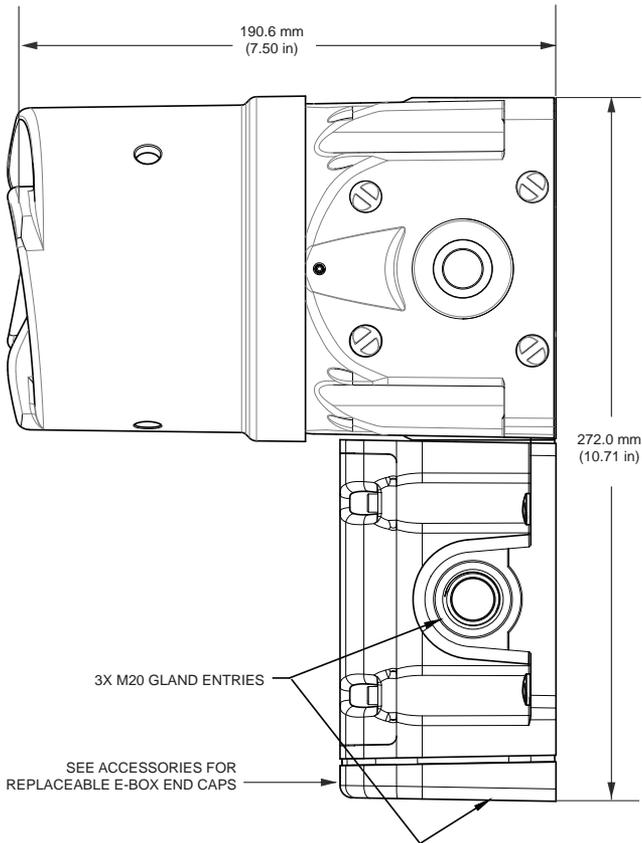

Wiring the Device

SAFETY MESSAGES FOR WIRING ⚠: When installing and operating flameproof electrical equipment, the relevant national regulations for installation and operation (e.g., EN60079-14, IEC Wiring Regulations, and NEC/CEC) must be observed.

- To avoid electrical shock hazards, do not connect wires when power is applied. Failure to observe this warning may lead to serious injury or death.
- To maintain the flameproof integrity of the enclosure, DO NOT damage the cover or threads while disassembling or reassembling the unit.
- Painting and surface finishes, other than those applied by Federal Signal Corporation, are not permitted.
- Cable termination should be in accordance with the specifications that apply to the application. Federal Signal recommends that all cables and cores be fully identified.
- Ensure that only the correct, equipment-certified glands are used and that the assembly is shrouded and correctly earthed.
- Gland entries are M20-1.5 6 H with an option for the M25 entry on the end of the increased safety box models. See Table 3 on page 11 for choosing the correct cable entry devices for Equipment in Potentially Explosive Atmospheres.
- Because of space limitations, ensure that the cable cores within the unit are not too slack.
- In all countries, the wiring must comply with all national and local codes and standards.
- Ensure that all nuts, bolts, and fixings are secure.

Preparing to Wire the Ex d Flameproof Models

⚠ WARNING

SHOCK HAZARD: To avoid electrical shock, do not connect wires when power is applied. Failure to observe this warning may lead to serious injury or death.

Ex d units are supplied with a ten-position PCB mounted screw terminal block. This section has wiring instructions for the flameproof models G-SPK 70 V and 100 V.


The maximum wire gauge is 4.0 mm² (12 AWG). The wire must be rated 85 °C or higher. Use only stranded cable to terminate the loudspeaker. The cross-sectional area of the primary earth (ground) must equal the cross-sectional area of the phase conductor.

Cable termination for these models should be in accordance with specifications that apply to the application. It is recommended that all cables and cores be fully identified. Use the appropriate cable gland for the application. Gland entry threads are M20-1.5 x 6" H.

Tools needed:

- 1.5 mm A/F hexagon key
- No. 1 Phillips® screwdriver
- Wire stripper

Figure 5 Ex d in/out PCB connections (2.8 V/0.8 V_{RMS})

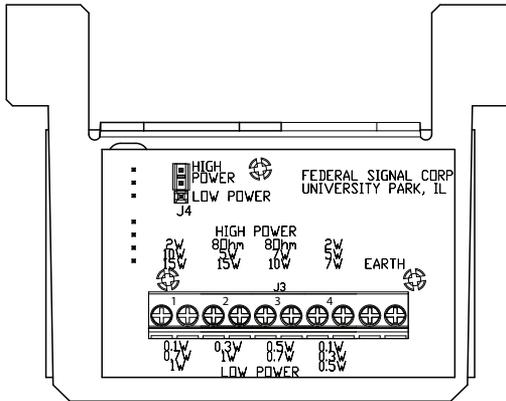

Wiring the Ex d Models

To wire the Ex d flameproof loudspeaker:

1. Unscrew the M3 hex set screw on the side of the housing one full turn.
2. Remove the cover from the housing by turning the cover counterclockwise. Three 120-degree spaced reliefs are provided for a 3/8" spanner wrench if needed. If the cover will not unscrew, back out the set screw a few additional turns.
3. Loosen the captive Phillips screw retaining the driver/printed circuit board (PCB).
4. Slide out the PCB until the terminals clear the housing. Strip the wire insulation 6.5 mm (0.25"). Maximum screw tightening torque is 0.5 Nm (4.5 in-lb)
5. The Model G-SPK has five selectable wattage tap settings on the high power setting and five selectable wattage tap settings on the low power setting. See Table 1 for options and terminal block wiring.

Each terminal block position has in/out connection points.

Table 1 Selectable wattage tap settings

Terminal 1	Terminal 2	Terminal 3	Terminal 4	J4 Setting	Watts
Audio +	Audio -			High	15 W
Audio +		Audio -		High	10 W
		Audio +	Audio -	High	7 W
	Audio +		Audio -	High	5 W
Audio +			Audio -	High	2 W
Audio +	Audio -			Low	1 W
Audio +		Audio -		Low	0.7 W
		Audio +	Audio -	Low	0.5 W
	Audio +		Audio -	Low	0.3 W
Audio +			Audio -	Low	0.1 W

*Connect the ground wire the terminal block position marked EARTH.

6. Insert the PCB into the enclosure and fully tighten the PCB captive screw.
7. Place the cover on the housing and tighten it by turning it clockwise.
8. To ensure O-ring compression, the cover must be fully seated against the housing when the threads are tightened. Turn the M3 set screw on the side of the housing until the screw contacts the housing.
9. Ensure that the unused wire entry is sealed with the provided brass M20-1.5 x 6 g stopping plug (equipment-certified)

Preparing to Wire the Ex de Increased Safety Models

⚠ WARNING

SHOCK HAZARD: To avoid electrical shock, do not connect wires when power is applied. Failure to observe this warning may lead to serious injury or death.

This section has wiring instructions for the increased safety models G-SPK 70 V and 100 V.

Ex de units are supplied with a six-pole spring tension clamp style terminal block. The maximum wire gauge is 4.0 mm² (12 AWG). The wire must be rated 85 °C or higher. Use only stranded cable to terminate the loudspeaker. The cross-sectional area of the primary earth (ground) must equal the cross-sectional area of the phase conductor.

Cable termination should be in accordance with specifications applying to the application. It is recommended that all cables and cores be fully identified. Use the appropriate cable gland for the application. Gland entry threads are M20-1.5 6H.

Conductive metalwork, including cable glands, must be a minimum of 5 mm away from the terminals.

Leads connected to the terminals shall be insulated for the appropriate voltage, and this insulation shall extend to within 1 mm of the metal of the terminal throat.

The G-SPK terminal block is supplied with two conductors per pole. The terminal block allows for easy supply-in and loop-out wiring to connect the loudspeakers in series.

Tools needed:

- 3.0 mm A/F hexagon key
- No. 1 Phillips® screwdriver
- Wire stripper

To wire the Ex de models:


1. Unscrew the four M4 socket head cap screws and remove the terminal box cover.

- Strip the wire insulation 8 mm to 9 mm (0.33 in).

NOTE: When using more than one single or multiple strand lead, the connection into either side of any terminal must be joined in a suitable manner, e.g., two conductors into a single insulated crimped bootlace ferrule.

- The loudspeaker is factory-wired as 15 W. To change the wattage tap setting, it is necessary to modify the factory wiring on the printed circuit board located inside the main housing. Refer to "Wiring the Ex d Models" on page 6 for information on changing the tap settings. The line bushing is wired as follows: (1) Audio +, (2) Audio -, (3) Earth.
- To connect wires, press the button on the terminal block with a Phillips screwdriver and insert the wire into the round opening. Release the button to make the connection.
- Connect the audio + wire from the audio source to the position marked Aud + on the terminal block.

Figure 6 Connections for DC or AC Ex de loudspeaker

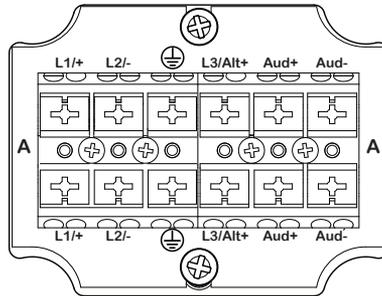

- Connect the audio - wire from the audio source to the position marked Aud- on the terminal block.
- Connect the ground wire to the position marked  on the terminal block.
- Secure the cover on the terminal box with the four M4 screws. Ensure that the gasket is properly seated to maintain IP rating. Do not overtighten the screws.

Maintaining the Loudspeaker

SAFETY MESSAGES TO MAINTENANCE PERSONNEL  Listed below are some important safety instructions and precautions you should follow:

- Read and understand all instructions before operating this system.
- Repair of flamepaths is not recommended.
- If you acquired a significant quantity of units, it is recommended that spares also be made available.
- To avoid electrical shock hazards, do not connect wires when power is applied. Failure to observe this warning may lead to serious injury or death.
- Any maintenance to the loudspeaker system must be performed by a trained electrician who is thoroughly familiar with all applicable national and local codes in the country of use.
- Any maintenance to the loudspeaker system must be done with power turned off.
- Check the loudspeaker periodically to ensure that the effectiveness of the device has not been reduced because it has been clogged with a foreign substance or because objects have been placed in front of it.
- Never alter the unit in any manner. Safety of the unit may be affected if additional openings or other alterations are made to the internal components or housing.
- The nameplate, which may contain cautionary or other information of importance to maintenance personnel, should NOT be obscured in any way. Ensure that the nameplate remains readable.
- After performing any maintenance, test the loudspeaker system to ensure that it is operating properly.

Failure to follow all safety precautions and instructions may result in property damage, serious injury, or death.

⚠ WARNING

EXPLOSION HAZARD: To prevent ignition of hazardous atmosphere, disconnect the loudspeaker from the supply circuit before opening it. Do not open the loudspeaker in the presence of explosive gases in the atmosphere. Failure to follow this warning may result in serious injury or death.

During the working life of the loudspeaker, it should require little or no maintenance. The non-metallic housing will resist attack by most acids, alkalis, and chemicals and is as resistant to concentrated acids and alkalis as most metal products. However, if abnormal or unusual environment conditions occur due to plant damage or accident, etc., visual inspection of the loudspeaker is recommended.

Cleaning the Enclosure

The enclosure should be cleaned periodically with a damp cloth to maintain maximum sound output. Periodic checks should be made to ensure the effectiveness of this device has not been reduced because the loudspeaker has become clogged with a foreign substance or because objects have been placed in front of the loudspeaker.

Lubricating the Threaded Joints

A silicone-based, non-hardening, chemically compatible grease can be applied if required.

Maintenance and Service

Technical Assistance: Contact our Technical Support Team at +1 708-587-3587 or signalsupport@fedsig.com.

Repair Service: A return authorization is required. Contact your Authorized Distributor or Federal Signal Customer Support. Defective products under warranty will be repaired or replaced at Federal Signal's discretion.

Product Returns: Returns require authorization from Federal Signal. Contact your Authorized Distributor for more information on our return policy or to request a return.

Replacement Parts

Contact the factory for spare parts availability and part numbers. Typical spare parts are listed below. Due to certification, certain component parts are not available for field replacement. Units with this type of damage must be either replaced entirely or returned to Federal Signal for service.

Table 2 Replacement Part

Description	Part Number
70 V _{RMS} Loudspeaker Kit (Includes PCBAs, Bracket, Driver, & Mounting Screws)	K859501405-070
100 V _{RMS} Loudspeaker Kit (Includes PCBAs, Bracket, Driver, & Mounting Screws)	K859501405-100

Table 3 Accessories

Description	Part Number
Indicator Ring/Legend Kit, Black	G-KIT-RP-BK
Indicator Ring/Legend Kit, Blue	G-KIT-RP-B
Indicator Ring/Legend Kit, Green	G-KIT-RP-G
Indicator Ring/Legend Kit, Magenta	G-KIT-RP-M
Indicator Ring/Legend Kit, Red	G-KIT-RP-R
Indicator Ring/Legend Kit, Yellow	G-KIT-RP-Y
E-Box Endcap with M20 Opening	K859500805-02
E-Box Endcap with M25 Opening	K859500805-01
E-Box Cover Assembly (Includes two terminal blocks, mounting plate, retention hardware)	K859501414
In-Line E-Box Coupler Kit	G-KIT-EC180
90-Degree E-Box Coupler Kit	G-KIT-EC90
Extension Box Spacer Kit	G-KIT-EXTB
Single Trunnion Kit	G-KIT-ST
Dual Trunnion Kit	G-KIT-DT
Adapter, M20 Male to 1/2" Female NPT	K231246A
Adapter, M20 Male to 3/4" Female NPT	K231247
15 W Audible Acoustic Insert	G-KIT-15WININSERT

Table 4 Choosing cable-entry devices for Equipment in Potentially Explosive Atmospheres

Models Ex	Atmospheres	Cable Entry Devices (cable glands, stopping plugs, etc.)
G-SPK-XXX-D (Ex db surface mount)	Gas	Cable entry devices shall be equipment certified as flameproof. To maintain the ingress protection of the flameproof loudspeaker enclosure, we recommend the cable entry device be IP66 certified.
G-SPK-XXX-E (Ex db e surface mount)	Gas	For the flameproof loudspeaker enclosure, cable entry devices shall be equipment certified as flameproof. To maintain the ingress protection of the flameproof loudspeaker enclosure, we recommend the cable entry device be IP66 certified. For the increased safety terminal enclosures (terminal boxes), cable entry devices shall be equipment certified as increased safety and shall maintain an IP rating of IP54.
G-SPK-XXX-D (Ex db surface mount) G-SPK-XXX-E (Ex db e surface mount)	Dust	Cable entry devices for the terminal enclosures shall be equipment certified as dust protected. To maintain the ingress protection of the loudspeaker and terminal enclosures, the cable entry devices shall be IP6X certified.



FEDERAL SIGNAL
Safety and Security Systems

2645 Federal Signal Drive, University Park, Illinois 60484

Additional translations available at signaling.fedsig.com

Traducciones adicionales disponibles en signaling.fedsig.com

Customer Support 1-800-344-4634+1-708-534-4756, iordersup@fedsig.com

Technical Support 1-800-755-7621+1-708-587-3587, signalsupport@fedsig.com
signaling.fedsig.com